PHANTOM 2 VISION

User Manual V1.00

2013.11.01 Revision

Congratulations on purchasing your new DJI product. Please read through the following steps in order to fully use this product.

It is advised that you regularly check the PHANTOM 2 VISION's product page at **www.dji.com** which is updated on a regular basis. This will provide services such as product information, technical updates and manual corrections. Due to any unforeseen changes or product upgrades, the information contained within this manual is subject to change without notice.

If you have any problems or questions regarding your product, please contact your dealer or DJI Customer Service.

©2013 DJI Innovations. All Rights Reserved.

Index

INDEX 2

IN THE BOX 4

REQUIRED ITEMS 4

SYMBOL LEGEND 5

WATCH THE QUICK START VIDEO 5

DOWNLOADING THE DJI VISION APP 5

1 ATTACHING THE PROPELLERS 6

1.1 Introduction 6
1.2 Assembly 6
1.3 Removing the Propellers 6
1.4 Notes 6

2 INSTALLING THE RANGE EXTENDER AND MOBILE DEVICE HOLDER 7

2.1 Installing the Range Extender 7
2.2 Installing the Mobile Device Holder 7

3 PREPARING THE REMOTE CONTROLLER 8

3.1 The Remote Controller 8
3.2 Power on the Remote Controller 8
3.3 Remote Controller Power Indicator Status Information 9
3.4 Antenna Orientation 9
3.5 Remote Controller Operation 10
3.6 Link between the Remote Controller and Receiver 11
Link Procedures 12
Link Indicator 12
3.7 Compliance Version Configuration 12

4 PREPARING THE RANGE EXTENDER 13

4.1 The Range Extender 13
4.2 Function Description 13
4.3 Power on the Range Extender 14
4.4 How to Bind the Camera & Range Extender 15

5. PREPARING THE CAMERA 17

5.1 The built-in camera 17
5.2 Main Functions 17

6 DOWNLOADING AND INSTALLING THE DJI VISION APP 19

6.1 Download and Install 19
6.2 Register & Login 19

7 PREPARING THE FLIGHT BATTERY 21

7.1 Intelligent Battery and Charger Instructions 21
7.2 Charging Procedures 21
7.3 Install the Battery 21
7.4 Battery Usage 22

©2013 DJI Innovations. All Rights Reserved.

Description of the Battery Level Indicator 22
7.5 Correct Battery Usage Notes 23

8 PHANTOM 2 AIRCRAFT 24

8.1 The Aircraft 24
8.2 Built-in Flight Control System Instructions 24
8.3 LED Flight Indicators Description 24
LED Flight Indicators Description 25

9 CONNECTING TO THE CAMERA 26

9.1 Camera Connection Procedures 26

10 CALIBRATING THE COMPASS 28

10.1 Calibration Warnings 28
10.2 Calibration Procedures 28
10.3 When Recalibration is Required 28

11 FLIGHT 29

11.1 Flying Environment Requirements 29
11.2 Start the Motors 29
11.3 Takeoff/Landing Procedures 29
11.4 Failsafe Function 30
Home Point 31
Go Home Procedures 31
Regain Control During Failsafe Procedure 31
Failsafe on the DJI VISION App 31
11.5 Low Voltage Warning Function 32
DJI VISION App Low Voltage Warning 32

12 DJI VISION APP USAGE 33

12.1 DJI VISION App Main Menu 33
12.2 Camera Page 33
Basic Use 33
Camera Settings 38
12.3 Album Page 41
Camera SD CARD Album 41
Mobile Device Album 42
12.4 News Page 44
12.5 Settings Page 45

13 ASSISTANT SOFTWARE INSTALLATION AND CONFIGURATION 48

13.1 Installing Driver and Assistant Software 48
13.2 Configure using the PHANTOM 2 VISION Assistant Software on a PC 48
13.3 Firmware upgrade of the PHANTOM 2 VISION 48
13.4 PHANTOM RC Assistant Software Description 49

14 TROUBLESHOOTING (FAQ) 50

15 APPENDIX 52

LED Flight Indicator Status 52
Specifications 53

©2013 DJI Innovations. All Rights Reserved.

In the Box

PHANTOM 2 VISION X1	5.8GHz Remote Controller X1	Range Extender X1
		
Propeller Pair X4	Mobile Device Holder X1	Micro-SD Card X1
		
Intelligent Battery X1	Charger X1	Cables X1
		
Plug Set X1	Screw X12	Screwdriver X 1
Assistant Wrench X1	Accessories Box X1	
		

Required Items

AA Battery x4

©2013 DJI Innovations. All Rights Reserved.

Symbol Legend

Forbidden(Important) Caution Tip Reference

Watch the Quick Start Video

This user manual details installation and usage procedures of the product. In addition, we provide a range of quick start videos. It is advised that you watch them fully before attempting to use the product.

Approach 1	Direct link.	www.dji.com/phantom2vision/training	
Approach 2	Scan the QR code to get the quick start video link.		Preparing for flight.
			How to connect to the DJI VISION App.
			The basics of flying, recording and sharing.

Downloading the DJI VISION App

Before attempting to use the product, please download and install the DJI VISION App. Get the DJI VISION App according to the following methods.

Approach 1	Download from App store or Google Play.	iOS user	Search “DJI VISION” from App Store.
		Android user	Search “DJI VISION” from Google Play.
Approach 2	Scan the QR code to get the download link.		Scan and download.

©2013 DJI Innovations. All Rights Reserved.

1 Attaching the Propellers

Please use the original 9-inch propellers which are classified by the color of each central nut. Damaged propellers can be replaced by purchasing new ones if necessary.

1.1 Introduction

Propellers	Grey Nut (9443)	Black Nut (9443 R)
Diagram		
Assembly Location	Attach to the motor thread that **does not have a black dot**.	Attach to the motor thread **that has a black dot**.
Fastening/Un-fastening Instructions	Lock: Tighten the propeller in this direction. Unlock: Remove the propeller in this direction.	

1.2 Assembly

1. (Fig.1) Remove the four warning cards from the motors after you read them.
2. (Fig.2) Prepare the two grey nut propellers and two black nut propellers. Make sure to match the black nut propellers with the correctly marked black dot motors. Tighten the propellers according to the fastening instructions.

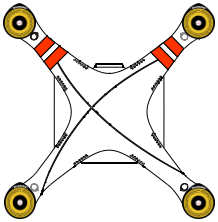

Fig.1

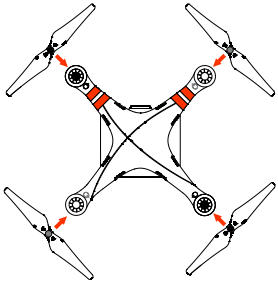

Fig.2

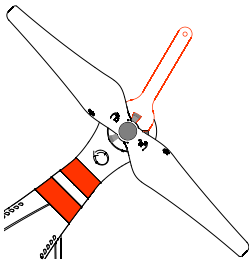

Fig.3

1.3 Removing the Propellers

(Fig.3) Keep the motor deadlocked in place with the assistant wrench (or one hand) and remove the propeller according to the un-fastening instructions.

1.4 Notes

(1) Propellers are self tightening during flight. DO NOT use any thread locker on the thread.

(2) Make sure to match the propeller nut colors with the corresponding motors.

(3) It is advised to wear protective gloves during propeller assembly and removal.

⚠ (4) Check that the propellers and motors are installed correctly and firmly before flight.

(5) Check that all propellers are in good condition before flight. DO NOT use any ageing, chipped, or broken parts.

(6) To avoid injury, STAND CLEAR of and DO NOT touch the propellers or motors when they are

©2013 DJI Innovations. All Rights Reserved.

spinning.

(7) ONLY use original DJI propellers for a better and safer flight experience.

2 Installing the Range Extender and Mobile Device Holder

2.1 Installing the Range Extender

1. Adjust the range extender to align with the mounting bracket installed on the carrying handle.
2. Tighten the lock-screw to affix the range extender on the right side of the carrying handle.

(1) Make sure the assembly orientation is correct with the LED side facing you.

(2) To obtain better communication, try to keep the range extender facing the aircraft during flight.

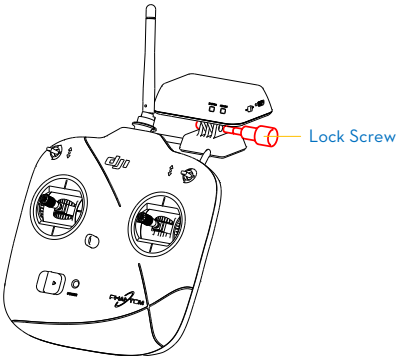

2.2 Installing the Mobile Device Holder

1. Tighten the Philips screws as shown to correctly attach the mobile device holder on the left side of the carrying handle.
2. Affix the mobile device sideways within the holder.

(1) Make sure the assembly orientation is correct. The mobile device should be facing you when mounted.

(2) It is recommended not to use oversize mobile devices (e.g. iPad), which cannot be placed into the Mobile Device Holder.

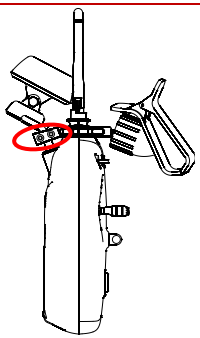

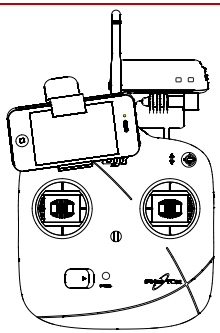

©2013 DJI Innovations. All Rights Reserved.

3 Preparing the Remote Controller

The PHANTOM 2 VISION remote control is a wireless communication device that uses the 5.8GHz frequency band. It is compliant with CE and FCC (see the FCC ID) regulations and is set to Mode 2 and CE compliance before delivery. If FCC compliance is required, it can be configured by twisting the potentiometer knob on the back of the remote controller. The operation mode can also be reset in the PHANTOM RC assistant software. Please refer to < PHANTOM RC Assistant> and <Compliance Configuration> for details.

(1) CE compliant devices have an effective communication range of 300 meters in open spaces due to power limitations. Be sure to watch your fight distance as the PHANTOM 2 VISION will enter Failsafe mode (auto-landing or go home and land) if it flies beyond this range.

(2) FCC compliant devices have an effective range of 500 meters in open spaces. Be sure to watch your fight distance as the PHANTOM 2 VISION will enter Failsafe mode (auto-landing or go home and landing) if it flies beyond this range.

(3) Pay attention to and follow local laws and regulations.

3.1 The Remote Controller

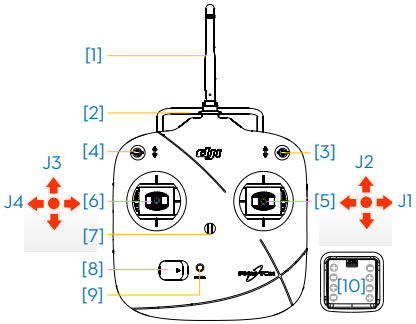

[1]	Antenna
[2]	Carrying Handle
[3]	Switch S1
[4]	Switch S2 (Reserved)
[5]	Joystick(J1: Roll [left&right], J2: Pitch [front&back])
[6]	Joystick(J3: Throttle [up&down], J4: Yaw [rotation])
[7]	Neck Strap Attachment
[8]	Power Switch
[9]	Power Indicator
[10]	Battery Compartment (On the back)

3.2 Power on the Remote Controller

1. Install the four AA Batteries (not included) into the battery compartment on the back of the remote controller according to the negative and positive poles.
2. Set the S1 and S2 switches to the upper most position (Position-1, refer to section 3.5) and all sticks at mid-point before switching on the power switch.
3. There is a power on indicator beep. If the remote controller is set to be CE compliant, then there will be one “Beep” while the FCC compliant version will have 2 “Beeps.” The power indicator blinks quickly green indicating the remote controller and receiver is linking. Once fully linked, the power indicator will change to a solid green.

©2013 DJI Innovations. All Rights Reserved.

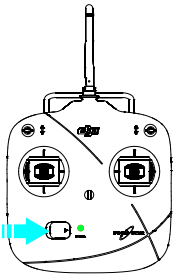

(1) If the low voltage warning sounds (refer to <Remote Controller State Introduction> section), please replace batteries as soon as possible.

(2) Using the incorrect type of battery may present a risk of damage.

(3) Remove the batteries after use and dispose of them safely.

(4) For long term storage, be sure to remove the batteries from the remote controller.

3.3 Remote Controller Power Indicator Status Information

Power indicator	Sound	Remote Controller State
▬▬▬	None	Functioning normally.
●●●●●●	None	Establishing link between the remote controller and the receiver.
● ● ● ●	B-B-B.....	Low voltage (at 4V-4.3V), should replace the batteries immediately.
●●●●●●	BBBB	Low voltage (lower than 4V). The remote controller will auto power off, should replace the batteries at once.
● ● ● ●	B-B-B.....	The remote controller will visual indication of an alarm after 15 minutes of non-operation. Alarm status will disappear once you start operation of the remote controller.

The remote controller will blink the LED and sound an alert when the voltage drops below 4V and auto power off after 3 seconds. This process will repeat even if you power cycle the remote controller. If this low voltage warning occurs during flight, the remote controller will auto power off causing the aircraft to enter the Failsafe mode which cannot be interrupted (refer to <Failsafe Function> section for details). It is strongly recommended to replace batteries if the 4V-4.3V low voltage warning occurs.

3.4 Antenna Orientation

Try to keep the antenna pointing skyward, perpendicular to the ground, in order to achieve maximum communication range during flight.

©2013 DJI Innovations. All Rights Reserved.

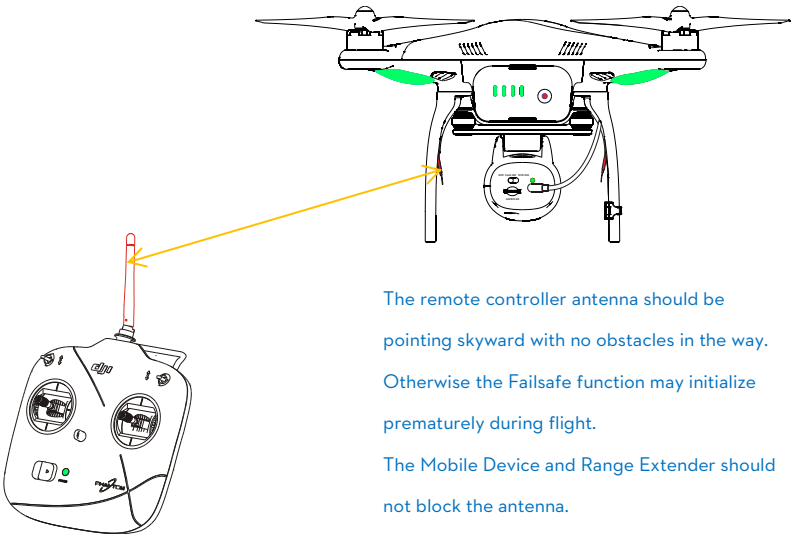

The remote controller antenna should be pointing skyward with no obstacles in the way. Otherwise the Failsafe function may initialize prematurely during flight.

The Mobile Device and Range Extender should not block the antenna.

3.5 Remote Controller Operation

Definitions

The `**stick neutral**' position **and** `**stick released**' means the control sticks of the remote controller are placed at the central position.

To `**move the stick**' means that the stick of remote controller is pushed away from the central position.

Remote Controller (Mode 2)	Aircraft (nose direction)	Operation details
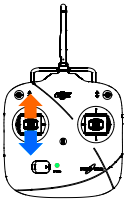	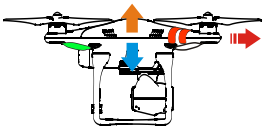	The throttle stick controls the aircraft elevation. Push the stick up and the aircraft will rise. Pull the stick down and the aircraft will descend. The aircraft will automatically hover and hold its height if the sticks are centered. Push the throttle stick above the centered (neutral) position to cause the aircraft to take-off. We suggest that you push the throttle stick slowly to prevent the aircraft from sudden and unexpected elevation.
	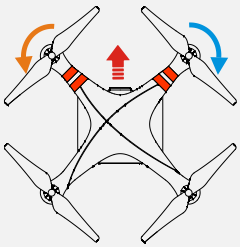	The yaw stick controls the aircraft rudder. Push the stick left and the aircraft will rotate counter clock-wise. Push the stick right and the aircraft will rotate clock-wise. If the stick is centered, the aircraft will always fly in the same direction. The command stick controls the rotating angular velocity of the aircraft. Increasing movement of the command stick results in faster aircraft rotation

©2013 DJI Innovations. All Rights Reserved.

		velocity.
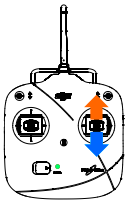	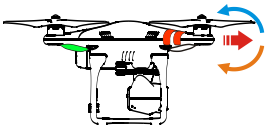	The pitch stick controls the aircraft front & back tilt. Push the stick up and the aircraft will tilt and fly forward. Pull the stick down and the aircraft will tilt and fly backward. The aircraft will keep level and straight if the stick is centered. Increasing movement of the command stick will result in a larger tilt angle (maximum is 35°) and faster flight velocity.
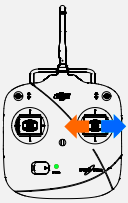		The roll stick controls the aircraft left & right tilt. Push the stick left and the aircraft will tilt and fly left. Pull the stick down and the aircraft will tilt and fly right. The aircraft will keep level and straight if the stick is centered. Increasing movement of the command stick will result in a larger tilt angle (maximum is 35°) and faster flight velocity.
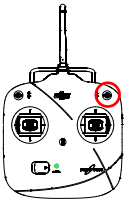	 Position-1 Position-2 Position-3	S1 is for compass calibration. Toggle the S1 from position-1 to position-3 and back to position-1 about 6 to 10 times which will force the aircraft to enter into compass calibration mode.

(1) For `Ready to Fly' the aircraft will hover (hold a stable horizontal position) when all sticks are released.

(2) For `Ready to Fly (non-GPS)' the aircraft will keep the aircraft level without horizontal positioning when all sticks are released.

3.6 Link between the Remote Controller and Receiver

There is a 5.8G receiver in the PHANTOM 2 VISION, with the link button and indicator located on the bottom of the aircraft as illustrated in the following diagram.

The link between the controller and is aircraft is already established for you so you can initially skip this procedure. If you ever replace the remote controller, re-establishing the link is required.

©2013 DJI Innovations. All Rights Reserved.

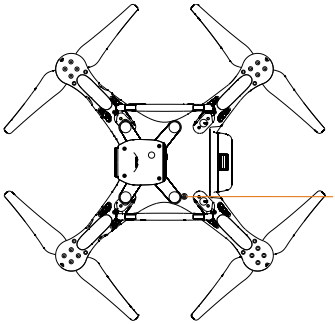

Link Procedures

1. Power off the remote controller, power on the aircraft. You will see the link indicator blinking red.
2. Press the link button with a thin object and hold until the link indicator blinks yellow. Release the link button.
3. Power on the remote controller and the link indicator should switch off. This indicates that the link has been successfully established.

Link Indicator

Link Indicator	Description	Operation
	No signal received.	Switch on the remote controller or perform a link procedure.
	In link status.	Switch on the remote controller.

3.7 Compliance Version Configuration

Compliance version can be reconfigured by twisting the potentiometer knob (See the following diagram) on the back of the remote controller using a flathead screwdriver. For CE compliance, set the remote controller to CE compliance by carefully turning the potentiometer knob to the full counter clock-wise position. For FCC compliance, set the remote controller to FCC compliance by carefully turning the potentiometer knob to the full clock-wise position. Users should follow their local regulations accordingly.

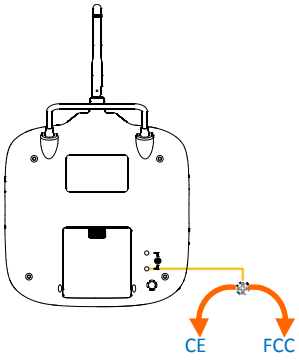

©2013 DJI Innovations. All Rights Reserved.

⚠	When adjusting the potentiometer knob to its limit position, be very careful to prevent damaging the potentiometer knob. Do not apply too much force during this adjustment. Also be sure to use the correct sized screwdriver.
💡	(1) It is set as CE compliance before delivery. (2) It is recommended to use a flathead screwdriver of Φ 2.4mm for adjustment. (3) You can use the DJI screwdriver with the flathead for adjustment.

4 Preparing the Range Extender

PHANTOM 2 VISION range extender is a wireless communication device that operates within the 2.4 GHz frequency band, is used for extending the effective range of communication between a mobile device (Smartphone) and the PHANTOM 2 VISION. In an open unobstructed area, the transmission distance can reach up to 300 meters, but is usually affected by the surrounding environment, such as trees, buildings and other sources of the same frequency. Before every flight, it is suggested that you ensure the range extender functions properly. Otherwise you may experience a communication issue with the mobile device and the PHANTOM 2 VISION.

Each range extender has a unique MAC address and network name (SSID), details of which are printed on the back label as `Phantom_1xxxxx'. The `xxxxx' represent the last five letters or numbers of the MAC address for the range extender.

4.1 The Range Extender

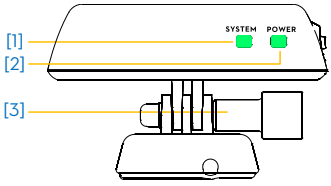

Front View

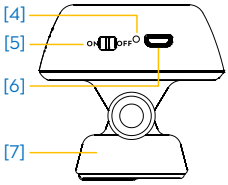

Right View

[1]	Wi-Fi Signal Indicator
[2]	Power Indicator
[3]	Lock-screw
[4]	Reset Button
[5]	Power Switch
[6]	Micro-USB
[7]	Mounting Bracket

4.2 Function Description

[1] Wi-Fi Signal Indicator (SYSTEM)

Tells you the system status of the range extender.

Wi-Fi Signal Indicator	Description
● ● ● ●	The range extender system is working normally.
Off	The range extender system is working abnormally.

©2013 DJI Innovations. All Rights Reserved.

[2] Power Indicator (POWER)

Tells you the power status of the range extender.

Power Indicator	Description
	The range extender is working normally or completely charged.
	Low voltage alert, a re-charge is required.
	The range extender is charging (allow for 3~4 hours, depending on USB power output).

(1) Make sure to charge the range extender completely before using it for the first time.

(2) If the power indicator is a solid red light, the ranger extender may stop working at any moment. Recharge it as soon as possible.

(3) It is recommended to charge the range extender completely before each use.

(4) Turn off the range extender after every use.

(5) Keep the range extender facing the aircraft during flight for the best communication link.

[3] Lock-screw

For attaching the range extender on the right side of the remote controller carrying handle.

[4] Reset Button:

Press to link the range extender and the camera.

[5] Power Switch:

ON – Power on.

OFF – Power off.

[6] Micro-USB

Used to charge the range extender.

[7] Mounting Bracket

It has been pre-installed on the remote controller's handle. It is used to attach the range extender.

4.3 Power on the Range Extender

1. Toggle the power switch of range extender to ON position.
2. Wait for approximately 30 seconds. The Wi-Fi signal indicator should blink green indicating the range extender is communicating properly.

©2013 DJI Innovations. All Rights Reserved.

It is advised that you power off the range extender after every flight to avoid the battery staying discharged.

4.4 How to Bind the Camera & Range Extender

If the camera and range extender connection is lost, or one of them needs to be repaired or replaced, a camera and range extender binding will need to be performed via the DJI VISION App.

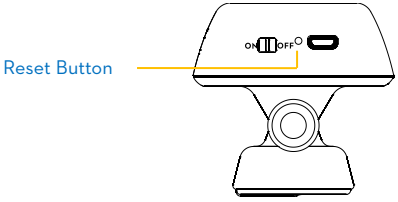

1. Power on the camera and range extender. Note (Place the camera power switch to the 'WIFI ON' position).
2. Approximately 30 seconds later, press the reset button on the range extender with a thin object until the Wi-Fi signal indicator turns off. The range extender will then restart automatically.
3. Approximately 30 seconds later, the Wi-Fi signal indicator should start to blink green, which indicates the range extender is now ready to be bound.
4. Find and select the Phantom_1xxxxx via the Wi-Fi list on the mobile device to connect the range extender.
5. (Fig.1) Run the DJI VISION App->Settings->General->Binding. (Fig.2) Select 'Scan the QR Code' to scan the camera QR code on the product packaging. (Fig.3) Get the camera SSID (E.g. FC200_0xxxxx) and the MAC address, select the tick on the top right corner. The range extender should automatically restart. The binding procedure is now complete.

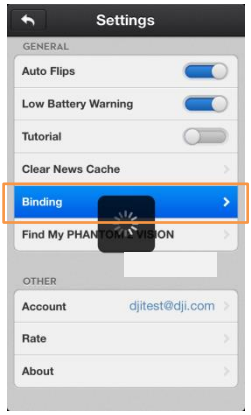

Fig.1

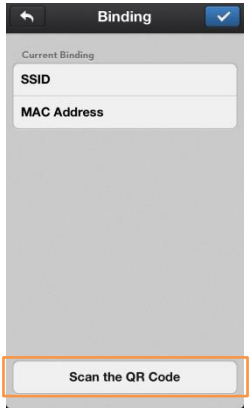

Fig.2 (QR code is only for example.)

©2013 DJI Innovations. All Rights Reserved.

Fig.3

(1) If both the camera and range extender are powered on and working normally so you will be able to find the SSID on the Wi-Fi list of the mobile device.

(2) DO NOT press the reset button unless a binding procedure is required. Otherwise it may lead to a link loss between the camera and the range extender.

(3) The QR code is located on the packaging of the PHANTOM 2 VISION. If you cannot find the QR code, please contact DJI customer service to receive the QR related to your camera's serial number.

©2013 DJI Innovations. All Rights Reserved.

5. Preparing the Camera

5.1 The built-in camera

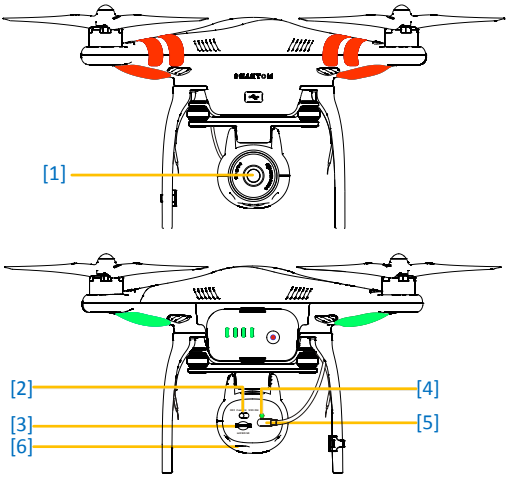

[1]	Lens
[2]	Camera Power Switch
[3]	Micro-SD Card Slot
[4]	Camera Status Indicator
[5]	Camera Cable
[6]	Capture/Record Button

Camera Features	Specifications
Resolution	14 Mega pixels
FOV	140 °/ 120° / 90 °
Sensor size	1/2.3"
Functions	Support of multi-capture, continuous capture and timed capture Support of HD Recording (1080p30/1080i60) Support of both RAW and JPEG photo formats

5.2 Main Functions

[1] Lens

For viewing and photographing, with main parameters of f/2.8 , FOV 140 °.

Please remove the lens cover when the camera is in use and replace the cover for storage.

[2] Camera Power Switch (on the back of the camera)

Used to power the camera on and off.

OFF – Powered off.

CAM ON – Power on, Wi-Fi off.

WIFI ON – Power and Wi-Fi are both on. Make sure to switch to `WIFI ON' and the range extender is powered on if using the DJI VISION App.

©2013 DJI Innovations. All Rights Reserved.

[3] Micro-SD Card Slot (on the back of the camera)

Make sure that the Micro-SD card is inserted before you take any photos or record any videos.

(1) Maximum supported Micro-SD card capacity is 32GB.

(2) The DJI VISION App may not be able to read the Micro-SD card prepared by the user. It is suggested that you use the DJI VISION App to format the Micro-SD card when first used in the camera.

(3) Refer to the <Camera Settings> for Micro-SD card formatting details.

[4] Camera Indicator (on the back of the camera)

The Camera Indicator is used to inform the user of the working status of the camera.

Camera indicator	Wi-Fi	Camera status
Solid on	OFF	Power On; Idle State
Slow Blink (0.2s on, 1.8s off)	ON	Idle State
Fast Blink (0.1s on, 0.3s off)	ON	Synchronizing photos and videos
Solid	OFF	Recording
Blink Once (0.2s on, 0.3s off)	ON/OFF	Taking a single capture
Blink 3 Times(0.1s on, 0.1s off)	ON/OFF	Taking 3 or 5 photos per shot
Fast Blink (0.1s on, 0.3s off)	ON/OFF	Firmware Upgrading
(0.2s green, 1.8s yellow)	ON	Recording
Solid	ON/OFF	Critical error
Slow Blink (0.2s on, 1.8s off)	ON/OFF	CMOS sensor error
Blink Once (0.2s on, 0.3s off)	ON/OFF	Operation failed
Blink 3 Times(0.1s on, 0.1s off)	ON/OFF	SD Card error
Fast Blink (0.1s on, 0.3s off)	ON/OFF	Upgrade error
(0.5s green, 0.5s yellow, 0.5s red, 0.5s Off)	ON/OFF	Camera has overheated

When camera temperature rises above 80℃, the LED indicator will blink . The camera will automatically power off if the temperature rises above 85℃.

[5] Camera Cable (on the back of the camera)

Make sure that the camera cable is firmly attached to the camera before powering the camera on.

[6] Capture/Record Button (on the bottom of the camera)

Capture function: Press the button once (less than 2seconds) to take a single capture.

Record function: Press the button once (greater than 2seconds) to begin recording. Press once again to stop.

©2013 DJI Innovations. All Rights Reserved.

6 Downloading and Installing the DJI VISION App

6.1 Download and Install

Download and install approaches		
Approach 1	Scan the QR code to read the download link. Download and install the DJI VISION App on your mobile device. You can find the QR code on the `Quick Start Guide' as well as on the packaging of the PHANTOM 2 VISION.	
Approach 2	iOS user	Search "DJI VISION" from App Store, download and install on your mobile device.
	Android user	Search "DJI VISION" from Google Play, download and install on your mobile device.

Supported mobile devices	
iOS (iOS6 or above)	Recommended: iPhone4s, iPhone5, iPhone5s, iPod Touch4, iPod Touch5; Available but not recommended: iPAD3, iPAD4, iPAD mini.
Android (System 4.0 or above)	Samsung Galaxy S3, S4, Note2, Note3 or mobile devices of similar configuration.

DJI continues to support many mobile devices and any information from users are welcome. Please send any questions or queries to the following mailbox: phantom2vision@dji.com.

Be aware that the DJI website regularly updates so make sure you visit often as well as the App Store or Google Play in order to download the latest version of the DJI VISION Apps.

6.2 Register & Login

Access the Internet to register and login.

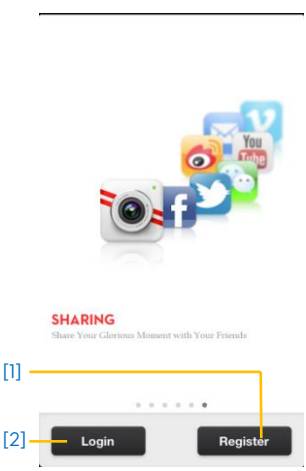

The App Welcome Page

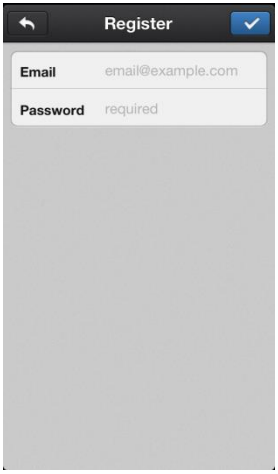

Registration Page

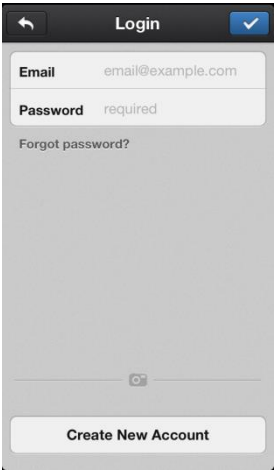

Login Page

©2013 DJI Innovations. All Rights Reserved.

[1] Register

Select `Register' to enter the registration page. Fill in your Email and Password information and then select to create a new account.

[2] Login

Select `Login' to enter the login page. Fill in your registered Email and Password and then select to login.

(1) You should login to your account the first time you use the DJI VISION App.

(2) If you do have an account, but forgot the password, select the "Forgot password" to retrieve it.

[3] Usage tips

Useful tips will display when you enter the welcome page. Tap the screen to display the next useful tip.

©2013 DJI Innovations. All Rights Reserved.

7 Preparing the Flight Battery

Before use, please read and follow the user manual, disclaimer, and the warnings on the battery.

Users take full responsibility for all operations and usage.

7.1 Intelligent Battery and Charger Instructions

The intelligent battery is specially designed for the PHANTOM 2 VISION, with a battery capacity of 5200mAh, voltage of 11.1v and a charge-discharge management functionality. The battery should only be charged with the charger provided by DJI. DJI take no responsibility for operation of any charger from a third party. There are many features provided by the DJI charger:

- Balance charge protection
- Full charge protection
- Short circuit protection
- Output protection
- Sleep protection
- Overheating protection

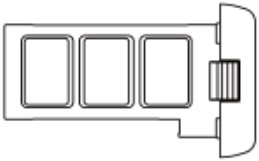

Intelligent Battery

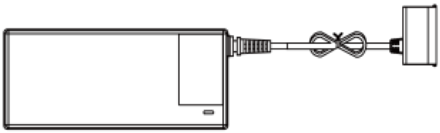

Charger

7.2 Charging Procedures

1. Connect the battery to the charger while the power is OFF.
2. Connect the charger to a wall socket. The charger indicator light will turn a solid red when it is charging.
3. Wait until the charger indicator turns solid green to which indicates that the battery is completely charged.

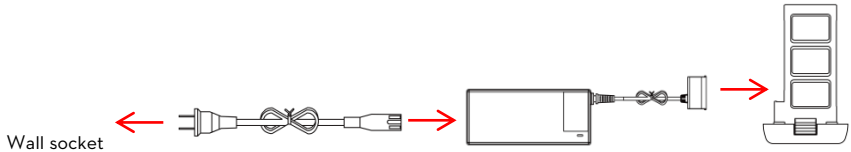

Wall socket



Charger Indicator

Charger indicator	Status of charge
	Charging.
	Completely charged.

7.3 Install the Battery

Push the battery into the battery compartment correctly as the following diagram shows. Make sure to push the

battery into the compartment until you hear a `click' sound.

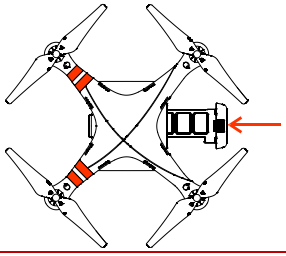

An incorrectly inserted battery may cause one of the following to occur:

(1) Bad contact.

(2) Unavailable battery information.

(3) Unsafe for flight.

(4) Unable to take off.

7.4 Battery Usage

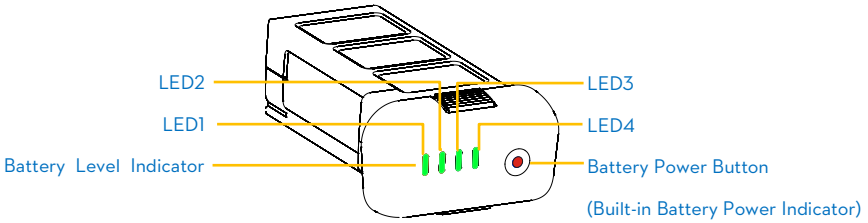

(1) Check the battery level: When the battery is powered off; pressing the battery power button once will indicate the current battery level. Refer to < Battery Level Indicator Description> for details.

(2) Power on: When the battery is powered off; press the battery power button once and then press and hold for 2 seconds to turn on the intelligent battery.

(3) Power off: When the battery is powered on; press the battery power button once and then press and hold for 2 seconds to turn off the intelligent battery.

More battery information is available in the battery tab of the PHANTOM 2 VISION assistant software.

Description of the Battery Level Indicator

The current battery level is shown during both the charging and discharging process. Refer to the following table for details

Battery level indicator				Current battery level
LED1	LED2	LED3	LED4	

©2013 DJI Innovations. All Rights Reserved.

On	On	On	On	87.5%~100%
On	On	On	Blinking	75%~87.5%
On	On	On	Off	62.5%~75%
On	On	Blinking	Off	50%~62.5%
On	On	Off	Off	37.5%~50%
On	Blinking	Off	Off	25%~37.5%
On	Off	Off	Off	12.5%~25%
Blinking	Off	Off	Off	0%~12.5%
Off	Off	Off	Off	<0%

7.5 Correct Battery Usage Notes

- It's suggested you purchase a new battery after you have discharged your current battery over 300 times.
- It's recommended to charge and discharge the battery thoroughly once every 20 charge/discharge cycles. Users should discharge the battery until there is less than 8% power left or until the battery can no longer be turned on. You should then fully recharge the battery to maximum capacity. This power cycling procedure will ensure the battery is working at its optimal level.
- Turn the power OFF when you have finished flying and remove the battery from its compartment.
- Take the battery out of the aircraft after every flight and store the battery in a safe and secure place.
- Adhere to the notes for the battery in the disclaimer and regard safety as your first priority.
- The battery should be charged in an environment that is between 0℃ to 60℃.
- It's suggested that your purchase a new battery if the current battery is swollen or damaged in any way.
- Never try to recharge or fly with a battery that is swollen or damaged in any way.

©2013 DJI Innovations. All Rights Reserved.

8 PHANTOM 2 Aircraft

8.1 The Aircraft

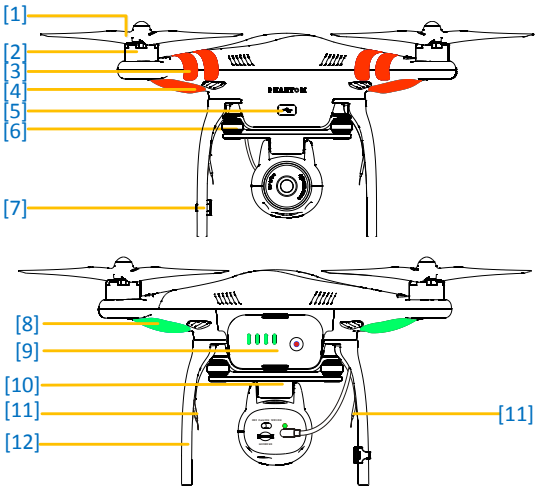

[1]	Propeller
[2]	Motor
[3]	Front Side
[4]	Front LEDs
[5]	Micro-USB
[6]	Vibration Absorber
[7]	Compass
[8]	LED Flight Indicators
[9]	DJI Intelligent Battery
[10]	Servo
[11]	Receiver Antenna
[12]	Landing Gear

8.2 Built-in Flight Control System Instructions

The built-in flight control system is utilized to control the entire aircraft's functions in flight such as Pitch (forwards and backwards), Roll (left and right), Elevator (up and down) and Yaw (turn left or right). The flight controller contains the MC (Main Controller), IMU, GPS, compass, receiver and LED indicators. The IMU (Inertial Measurement Unit) has a built-in inertial sensor and a barometric altimeter that measures both attitude and altitude. The compass reads geomagnetic information which assists the GPS (Global Position System) to accurately calculate the aircrafts position and height in order to lock the aircraft in a stable hover. The receiver is used to communicate with the remote controller and the MC acts as the brains of the complete flight control system connecting and controlling all the modules together.

8.3 LED Flight Indicators Description

After powering on the intelligent battery, the LED flight indicators light up to show the aircraft's current status.

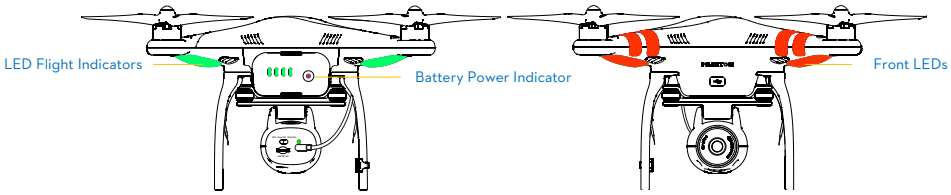

Front LEDs

The front LEDs are for indicating where the nose of the aircraft is. They light up solid red only after the motors have started spinning.

©2013 DJI Innovations. All Rights Reserved.

LED Flight Indicators Description

Normal status	LED flight indicators	Notes
Power On Self-Test		----
Warming Up		Aircraft cannot take off.
Ready to Fly		Slow blinking green.
Ready to Fly (non-GPS)		Slow blinking yellow.
Abnormal status	**LED flight indicators**	
Remote Controller Signal Lost		Fast blinking yellow. Refer to <Failsafe>.
1st Level Low Voltage Warning		Slow blinking red.
2nd Level Low Voltage Warning		Fast blinking red.
Not Stationary or Sensor Bias Is Too Big		Keep aircraft stationary or perform IMU calibration.
Error*		Cannot fly.
Compass Needs Calibration		Refer to <Compass Calibration>.

(1) The aircraft should be kept stationary on level ground before takeoff.

(2) Make sure the aircraft's status is in Ready to Fly or Ready to Fly (non-GPS) mode before takeoff.

(3) If an error occurs (LED is solid red), please connect to the PHANTOM 2 VISION assistant software for more detailed information.

NO.	Errors	Operation
1	IMU calibration is required.	Calibrate within the assistant software.
2	IMU is abnormal.	Should be repaired.
3	Compass is abnormal.	Should be repaired.
4	Remote controller's mid-point is set abnormally.	Refer to < How to solve large margin(s) mid point error?>.

©2013 DJI Innovations. All Rights Reserved.

9 Connecting to the Camera

9.1 Camera Connection Procedures

Please carry out the following procedures to connect the mobile device to the PHANTOM2 VISION.

1. Power on the remote controller and the range extender.
2. Make sure the switch on the back of the camera is set to “WIFI ON” and then power on the PHANTOM 2 VISION.
3. (Fig.1)Enable the Wi-Fi on your mobile device; wait for about 30 seconds, and then select the Phantom_1xxxxx from theWi-Fi network list.
4. (Fig.2)Run the DJI VISION App on your mobile device which will indicate the current Wi-Fi connection status on the main menu. The Wi-Fi connection indicator will turn solid green which means the connection is good.
5. Click the “CAMERA” icon and the DJI VISION App will establish live camera preview (Fig.3). This means everything is now functioning.

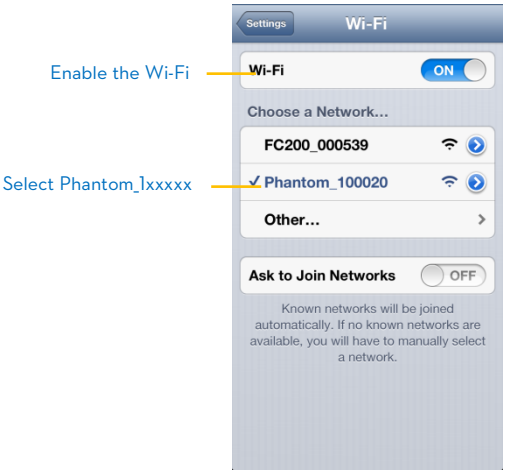

Fig.1

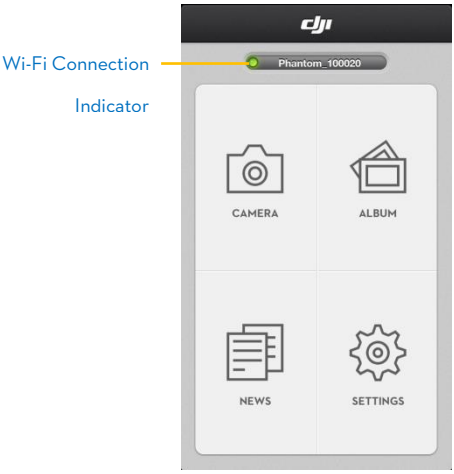

Fig.2

Fig.3

©2013 DJI Innovations. All Rights Reserved.

Wi-Fi Connection Indicator Description

Icon		Description
	Solid green	Wi-Fi is now connected to the PHANTOM 2 VISION.
	Solid blue	Wi-Fi is connected to another Wi-Fi network and NOT to the PHANTOM 2 VISION.
	Off	No Wi-Fi connection.

(1) The first time you launch the DJI VISION App, Internet access is required to finish the login process or new account creation.

(2) The SSID is unique for each PHANTOM 2 VISION which should appear in your Wi-Fi list as Phantom_1xxxxx. Always connect to the SSID starting with Phantom_1xxxxx. FC200_0xxxxx is the SSID of the camera and should not be connected to. If the SSID FC200_0xxxxx is connected to, then the connection signal range will be extremely shortened.

©2013 DJI Innovations. All Rights Reserved.

10 Calibrating the Compass

IMPORTANT: Make sure to perform the Compass Calibration procedures prior to the first flight.

The compass is very sensitive to electromagnetic interference which causes abnormal compass data and leads to poor flight performance or even flight failure. Regular calibration of the compass enables the compass to perform at its optimal level.

10.1 Calibration Warnings

(1) DO NOT calibrate your compass where there is a possibility for the existence of strong magnetic interference such as magnetite, parking structures, and steel reinforcement underground.

(2) DO NOT carry ferromagnetic materials with you during calibration such as keys or cellular phones.

(3) Compass Calibration is very important; otherwise the flight control system will not work properly.

10.2 Calibration Procedures

Choose an open space to carry out the following procedures. Please watch the quick start video of the PHANTOM 2 VISION for more compass calibration details.

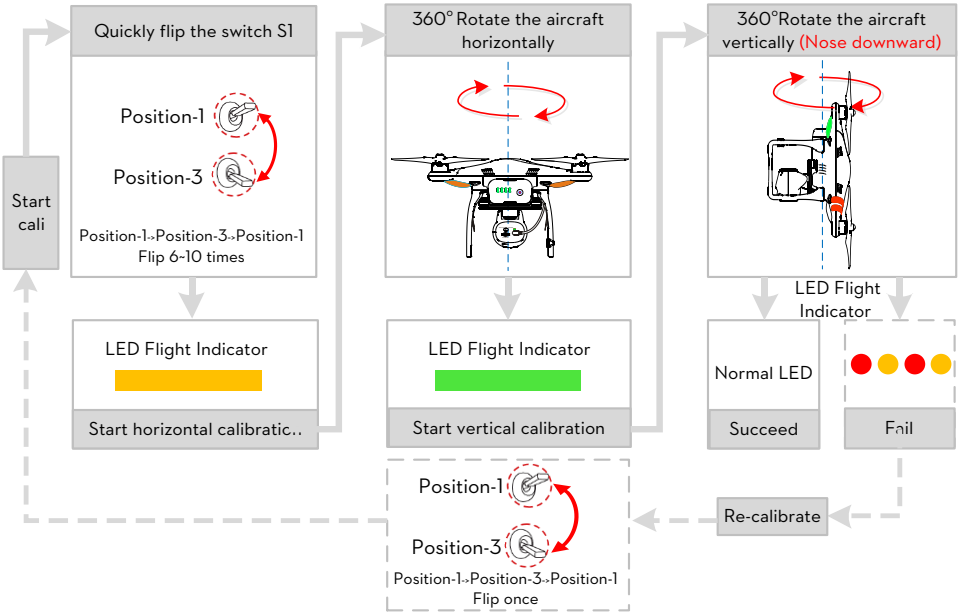

10.3 When Recalibration is Required

(1) When Compass Data is abnormal, the LED flight indicator will blink alternating between red and yellow.

(2) Last compass calibration was performed at a completely different flying field/location.

(3) The mechanical structure of the aircraft has changed, i.e. changed mounting position of the compass.

(4) Evident drifting occurs in flight, i.e. the aircraft doesn't fly in straight lines.

©2013 DJI Innovations. All Rights Reserved.

11 Flight

11.1 Flying Environment Requirements

(1) Before your first flight, please allow yourself some flight training (Using a flight simulator to practice flying, getting instruction from an experienced person, etc.).

(2) DO NOT fly in bad weather, such as rain or wind (more than moderate breeze) or fog.

(3) The flying field should be open and void of tall buildings or other obstacles; the steel structure within buildings may interfere with the compass.

(4) Keep the aircraft away from obstacles, crowds, power lines, trees, lakes and rivers etc.

(5) Try to avoid interference between the remote controller and other wireless equipment. (No base stations or cell towers around)

(6) The flight control system will not work properly at the South Pole or North Pole.

(7) All parts must be kept out of the reach of children to avoid CHOKING HAZARDS; if a child has accidentally swallowed any part, you should seek immediate medical assistance.

11.2 Start the Motors

A Combination Stick Command (CSC) is used to start the motors instead of simply pushing the throttle stick up. This is a safety precaution to prevent the motors from accidentally spinning up. Push both sticks to their bottom corners as indicated in the diagram below to start the motors. Once the motors have spun up, release both sticks simultaneously. The same combination stick command (CSC) is used to stop the motors.

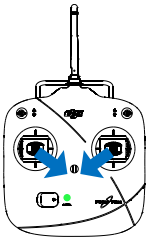

11.3 Takeoff/Landing Procedures

1. Start by placing the PHANTON 2 VISION on the ground with the battery level indicator facing you.
2. Power on the remote controller.
3. Power on the range extender.
4. Switch the camera to the “WIFI ON” position.
5. Power on the aircraft by turning on the intelligent battery, refer to <Battery Usage> for details.
6. Connect the mobile device to the PHANTOM 2 VISION and then run the DJI VISION App to enter the camera preview page.
7. Wait until the LED flight indicator starts to slowly blink green/yellow. This means the aircraft is initializing and entering the “Ready to Fly”/“Ready to Fly (non-GPS).” mode. Then proceed to execute the CSC

©2013 DJI Innovations. All Rights Reserved.

command to start motors.

8. Push the throttle stick up slowly to lift the aircraft off the ground. Refer to <Remote Controller Operation Mode> for more details.
9. Enjoy your flight while capturing and recording with the DJI VISION App. Refer to the<DJI VISION App Usage> for more details.
10. Be sure you are hovering over a level surface. Pull down on the throttle stick gently to descend and land.
11. After landing the aircraft on the ground, keep the throttle stick at its lowest position for about 3 to 5 seconds which will automatically stop the motors.

You SHOULD NOT execute the CSC during normal flight! This will stop the motors and cause the aircraft to descend rapidly and drop without any type of control.

(1) When the LED flight indicator blinks yellow rapidly during flight, the aircraft has entered into Failsafe mode, refer to <Failsafe Function> for details.

(2) A low voltage warning is indicated by the LED flight indicator blinking red slowly or rapidly during flight. Refer to the <Low Voltage Warning Function> for details.

(3) Watch the quick start video about flight for more flight information.

11.4 Failsafe Function

The aircraft will enter Failsafe mode when the connection from the remote controller is lost. The flight control system will automatically control the aircraft to return to home and land to reduce injuries or damage. The following situations would make the aircraft fail to receive a signal from the remote controller and enter Failsafe mode:

(1) The remote controller is powered off.

(2) The aircraft has flown out of the effective communication range of the remote controller.

(3) There is an obstacle obstructing the signal between the remote controller and the aircraft, essentially reducing the distance the signal can travel.

(4) There is interference causing a signal problem with the remote controller.

Failsafe works differently depending on the mode the aircraft is in when Failsafe mode is initiated whether it is in the Ready to Fly or Ready to Fly (non-GPS) mode.

Ready to Fly (non-GPS) ---- Automatic landing

The flight control system will try to keep the aircraft level during descent and landing. Note that the aircraft may be drifting during descent and landing process.

Ready to Fly ---- Automatic go home and land

The flight control system will automatically control the aircraft to fly back to the home point and land.

©2013 DJI Innovations. All Rights Reserved.

Home Point

When the aircraft is initializing the Ready to Fly status, the aircraft will record the current GPS coordinates as the home point. It is recommended to lift off only after Ready to Fly status is confirmed for the safety of being able to fly back to home point successfully in case Failsafe mode is initiated.

Go Home Procedures

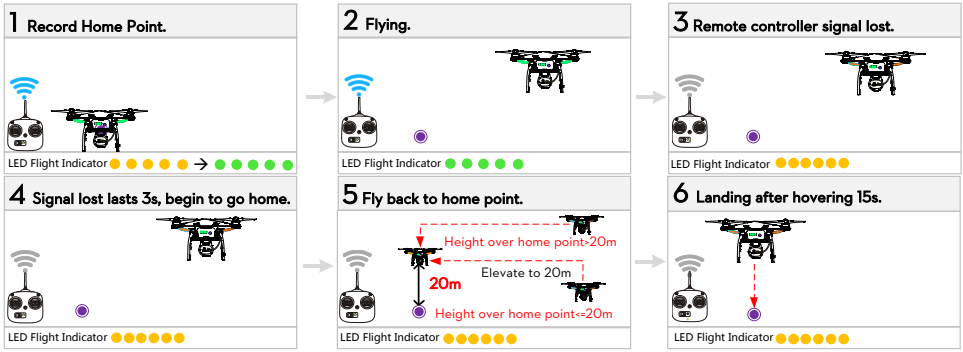

Regain Control During Failsafe Procedure

Position of Switch S1	Position-1	Position-2	Position-3
How to regain control	When the S1 switch is switched to Position-1, toggle the S1 switch to any other position once to regain control. If remote controller's signal is recovered, control is returned back to the pilot.	Regain control as soon as signal is recovered.	

Failsafe on the DJI VISION App

The DJI VISION App will provide information during Failsafe.

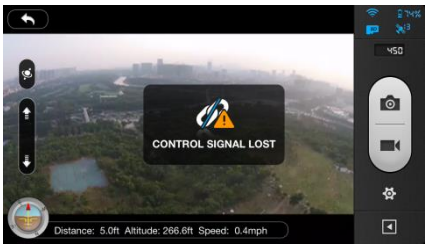

Control Signal Lost Indicator

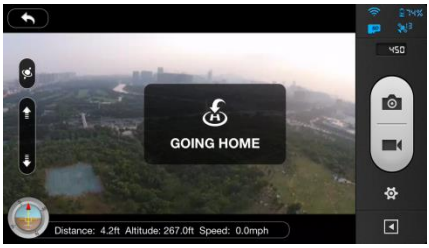

Going Home Indicator

Refer to the <DJI VISION App Usage> for details.

©2013 DJI Innovations. All Rights Reserved.

11.5 Low Voltage Warning Function

The Low voltage warning alerts users when the battery is close to depletion during flight. When it appears, users should promptly fly back and land to avoid accidental damage. The PHANTOM 2 VISION has two levels of low voltage warning. The first appears when the battery has less than 30% power and the second when it has less than 20%.

When battery power drops below 30% an LED indicator will blink red slowly and an alert will show on the DJI VISION app; refer to the <DJI VISION app Low Voltage Warning>. At lower than 20% the LED indicator will blink red rapidly and the DJI VISION app will sound an alarm; refer to the <DJI VISION App Low Voltage Warning>. The PHANTOM 2 VISION will also begin to descend and land automatically. After it has landed, keep the throttle stick at its lowest point or execute CSC; refer to <Starting the Motors>.

If you push the throttle stick above the mid-point, the PHANTOM 2 VISION will ascend slowly. Use the throttle, pitch, roll and yaw sticks normally to find a more appropriate landing area if required.

DJI VISION App Low Voltage Warning

DJI VISION App will show low voltage warnings.

(1) A red rectangle will blink on the camera screen.

(2) Audible alarm. Make sure the sound is turned on and volume is turned up on your mobile device.

(3) The aircraft battery icon will turn red.

Low Voltage Warning

	Refer to the <DJI VISION App Usage> for details.
	Remember to fly your PHANTOM 2 VISION back as soon as you see a low voltage warning.

©2013 DJI Innovations. All Rights Reserved.

12 DJI VISION App Usage

The DJI VISION App controls the PHANTOM 2 VISION camera including capture and recording, settings, pitch angle adjustments, and displays essential status including flight parameters and battery life.

12.1 DJI VISION App Main Menu

After login you will come to the main page. This shows the current Wi-Fi connection and four app function icons.

Icons		Description
	Camera	Click to enter camera preview
	Album	Click to enter Album
	News	Click to enter DJI news
	Settings	Click to enter App settings

(1) Connect your mobile device to the PHANTOM 2 VISION Wi-Fi network to use the camera and onboard album.

(2) Connect your mobile device to the internet (mobile or Wi-Fi) to share photos, videos and read DJI news.

12.2 Camera Page

Basic Use

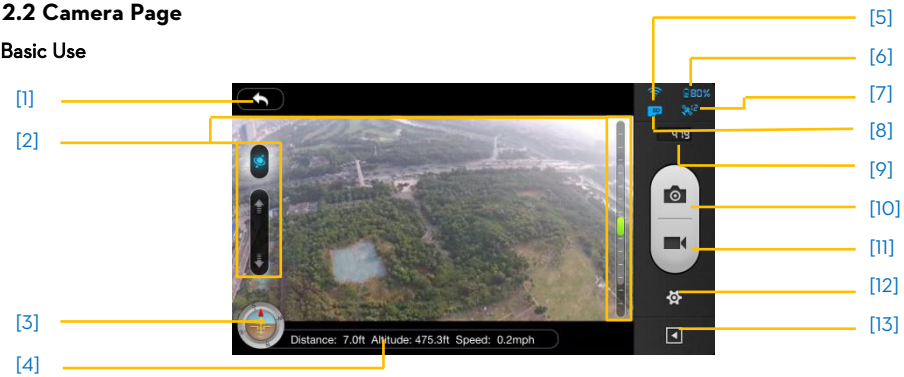

[1] Return

©2013 DJI Innovations. All Rights Reserved.

- Return to the preview page

[2] Camera Tilt Control

- Tilt Control Mode. Tap and hold to enter the Accelerometer Sensor Mode. Release to return to normal mode.

Normal

Tap up arrow ( ) to pitch camera upwards and down arrow ( ) to pitch downwards. Green slider indicates current camera pitch.

Accelerometer Sensor Mode pitch control	Pitch movement
	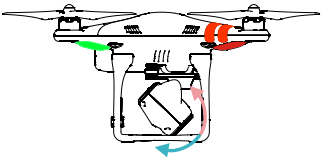

Accelerometer Sensor Mode

Tap and Hold to switch on Accelerometer Sensor Mode to control camera pitch and rotation by moving your mobile device.

Tilt device forward to pitch camera downward and backward to pitch upward. Lean it left to rotate left and right to rotate right.

Accelerometer Sensor Mode Pitch Control		Pitch Movement
	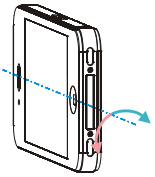	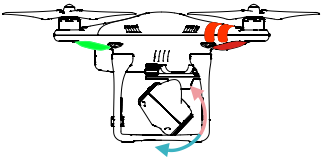
Accelerometer Sensor Mode Yaw Control		**Yaw Movement**
		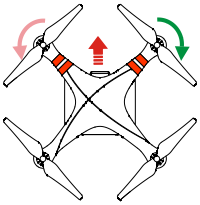

In Accelerometer Sensor Mode, the pitch angle indicator will show a grey area. When the green pitch indicator is inside the grey area, the camera will move according to pitch gestures. When the indicator is outside of the grey area, pitch gestures will control the camera's pitch speed. The bigger the

©2013 DJI Innovations. All Rights Reserved.

	gesture of the mobile device, the faster the camera will move.

[3] Flight Attitude and Radar Function

Flight attitude is indicated by the flight attitude icon.

(1) The red arrow shows which direction the PHANTOM 2 VISION is facing.

(2) Blue and brown areas indicate its pitch.

(3) Tilting of the brown and blue area shows roll angle.

Tap the flight attitude icon to turn on the radar function. Home is located in the center of the radar and the red icon indicates the PHANTOM 2 VISION's current heading, direction, and approximate distance from home. Tap the flight attitude icon again to disable the radar.

(1) By default, the center of the radar indicates the home point that has been recorded by the PHANTOM 2 VISION. Click the center of the radar to switch the center to your mobile device's current location.

(2) If your mobile device contains a compass, the top portion of the Radar is the direction you are pointing. If not, the radar will be oriented due north.

[4] Flight Parameters

Distance: Horizontal distance from home point.

Altitude: Vertical distance from home point.

Speed: Horizontal flying speed.

Distance will appear as NA if the PHANTOM 2 VISION is not Ready to Fly.

[5] Wi-Fi Signal Intensity

Indicates camera is connected to your mobile device and Wi-Fi is working normally.

The connection between the camera and mobile device may fail if Wi-Fi signal strength is low. Refer to the <PHANTOM 2 VISION CONNECTION BROKEN>on the camera page.

©2013 DJI Innovations. All Rights Reserved.

[6] Aircraft Battery Level

(1) When available power is more than 30%, the battery icon is blue (e.g.). This battery level is appropriate for flight.

(2) When below 30%, the battery icon will turn red (e.g.) and the LED flight indicator will slowly blink red. This battery level is low for flight. It is recommended that you fly your PHANTOM 2 VISION home and land it as soon as possible.

(3) After available power drops below 20% (e.g.), there is no longer enough power for flight. The LED flight indicator will begin to flash red rapidly and the PHANTOM 2 VISION will begin an automatic descent and land.

The available power thresholds mentioned above can be adjusted in the PHANTOM 2 VISION assistant software.

[7] Aircraft GPS Status

Displays GPS status and the number of available satellites. The icon is highlighted when more than 6 satellites are found, enabling Ready to Fly mode.

[8] Micro-SD Card Status

Displays Micro-SD Card Status. The icon is highlighted when a valid Micro-SD card is inserted. If there is no Micro-SD card present, it is grayed out.

[9] Remaining Shots

Displays estimated shots remaining, based on the size of the current selected photo. This shows `0' if:

(1) Micro-SD card is not inserted.

(2) Micro-SD card is full.

(3) Micro-SD card is damaged.

(4) Connection between the DJI VISION App and camera is broken.

[10] Shutter Button

Tap to take photos.

Single capture: press once for a single capture.

Continuous capture: press once for 3 or 5 captures.

Timed capture: press once to begin a timed capture, press again to stop.

(1) Shutter button is disabled during video recording.

(2) Capture modes can be reconfigured in camera settings; refer to the <Camera Settings>.

©2013 DJI Innovations. All Rights Reserved.

[11] Record Button

Start and Stop video recording. Tap once to start recording. A red dot will blink to indicate recording is in progress and a time elapsed counter will appear in the top right corner of the preview screen. Press again to stop recording.

[12] Camera Settings

Tap to open the camera settings menu, refer to <Camera Settings>.

[13] Hide or Show Flight Parameters.

Tap to hide the flight parameters. Tap again to show.

©2013 DJI Innovations. All Rights Reserved.

Camera Settings

[1] Capture Mode

	Single capture.
	3 captures.
	5 captures.
	Timed capture. Also selectable: a) Intervals between two shots (3~60 s) b) Number of shots (2~254, or infinite shots until SD card is filled)
Capture Button will change according to the selected capture mode. (, , , .)	

[2] Photo Size

	Large: 4384 x 3288, 4:3, 14.4MP
	Medium: 4384 x 2922, 3:2, 12.8MP
	Small: 4384 x 2466, 16:9, 10.8MP

[3] Video Resolution

	1920 x 1080 60i, 16:9
	1920 x 1080 30p, 16:9
	1280 x 960 30p, 4:3
	1280 x 720 60p, 16:9
	1280 x 720 30p, 16:9
	640 x 480 30p, 4:3 (VGA)
Three Field of View (FOV) options are supported when shooting in 1920x1080 60i and 1920x1080 30p: Wide (140˚), Medium (120˚) and Narrow (90˚).	

©2013 DJI Innovations. All Rights Reserved.

[4] Photo Format

JPEG

RAW

The PHANTOM 2 VISION camera shoots in JPEG and RAW file formats simultaneously when this option is selected. See the following table for detailed specifications.

JPEG photo size	4384 X 3288	4384 X 2922	4384 X 2466
RAW photo size	4384 X 3288	4384 X 2920	4384 X 2464

RAW is not supported in continuous capture mode or timed capture mode. JPEG photos will be created automatically.

[5] Selectable ISO

AUTO
100
200
400

[6] White Balance



AWB (auto)
Sunny
Cloudy
Indoor

[7] Exposure Metering



Center
Average
Spot

[8] Exposure Compensation

-2.0 (EV)	2.0 (EV)
-1.7 (EV)	1.7 (EV)
-1.3 (EV)	1.3 (EV)
-1.0 (EV)	1.0 (EV)
-0.7 (EV)	0.7 (EV)

©2013 DJI Innovations. All Rights Reserved.

	-0.3 (EV)	0.3 (EV)
	0 (EV)	

[9] Sharpness

	Standard
	Hard
	Soft

[10] Anti-flicker

	Auto
	50Hz
	60Hz

[11] Restore Default Settings

Restores all camera default settings. Camera reboot is needed to allow restoration to take effect.

[12] Format SD Card

Format the SD card. All SD card data will be lost after formatting. Remember to backup before formatting.

©2013 DJI Innovations. All Rights Reserved.

12.3 Album Page

Camera SD CARD Album

Browse thumbnails of photos and videos stored on the SD card. Tap to view photo or watch video.

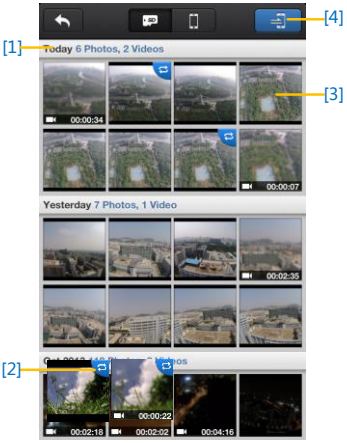

[1] Photos and Videos are listed and grouped by date.

[2] All photos and videos that have already been synced to your mobile device are identified with the icon.

[3] Click any thumbnail for single view mode. Click a Photo thumbnail that hasn't been synchronized to the mobile device to view the photo. Swipe left or right to view the previous or next photo item. Tap on a video thumbnail to play it and view the video's length. A progress bar will also appear at the bottom of the screen. Tap to enter single synchronization mode to synchronize a single photo or video, or to synchronize and play a video at the same time.

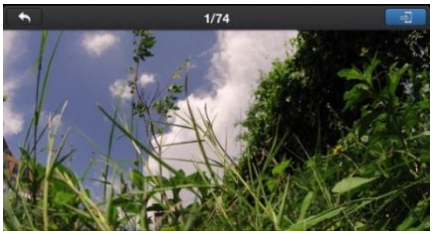

[4] Click the button to enter multiple synchronization mode (as shown in the following diagram). Click thumbnails to select photos or videos to synchronize to your mobile device (The thumbnails identified by the check mark are successfully selected.). Or you can select one or more groups to be synchronized by checking the box before the group, and then click to start synchronizing. During the synchronization process, users can click to cancel the synchronization. Photos and videos that have been synchronized to the mobile

©2013 DJI Innovations. All Rights Reserved.

device will remain.

> ⚠ Some mobile devices may fail to support synchronization of 1080i60 video files.

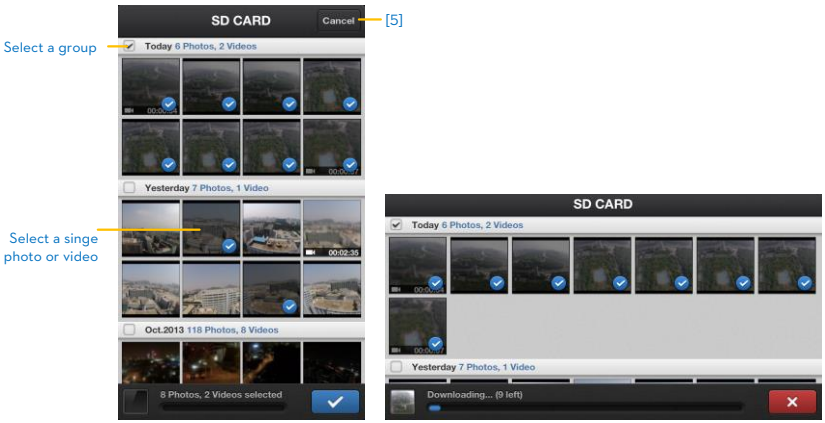

[5] Click “Cancel” or “Finished” to exit the multiply synchronization mode and return to the SD CARD page.

Mobile Device Album

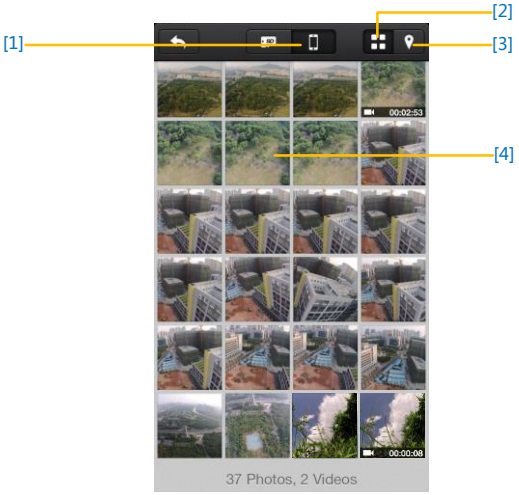

[1] You can browse all photos and videos in the album which have been synchronized to the mobile device, view a selected photo or play a selected video.

[2] Photos and videos are listed in thumbnail style and sorted by capture time.

[3] Pictures and videos are sorted by captured/recorded Geo-tagged locations.

©2013 DJI Innovations. All Rights Reserved.

Access to the Internet is required to load a map.

[4] Click any thumbnail for single view; you can slide left or right to view the previous or next photo. Click a video thumbnail to play a single video.

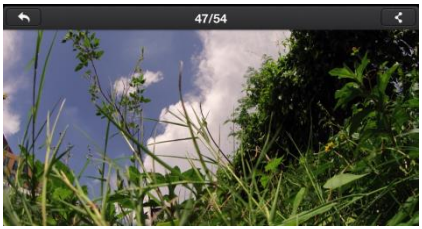

[5] Click to share your photos and videos to social network sites.

Access to the Internet is required to share your photos and videos.

SHARING

Share Your Glorious Moment with Your Friends

©2013 DJI Innovations. All Rights Reserved.

12.4 News Page

View the latest DJI news. (Internet access is required.)

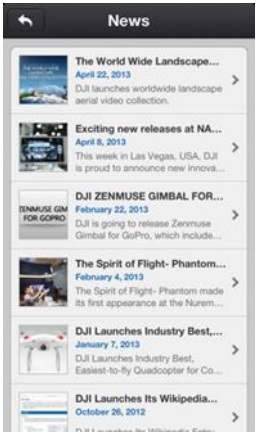
News
The World Wide Landscape...
April 22, 2013
DJI launches worldwide landscape aerial video collection.
Exciting new releases at NA...
April 8, 2013
This week in Las Vegas, USA, DJI is proud to announce new innova...
DJI ZENMUSE GIMBAL FOR...
February 22, 2013
DJI is going to release Zenmuse Gimbal for GoPro, which include...
The Spirit of Flight- Phantom...
February 4, 2013
The Spirit of Flight- Phantom made its first appearance at the Nurem...
DJI Launches Industry Best,...
January 7, 2013
DJI Launches Industry Best, Easiest-to-fly Quadcopter for Co...
DJI Launches Its Wikipedia...
October 26, 2012

News List

News Detail
The World Wide Landscape Aerial Video Collection
April 22, 2013
DJI is going to host an aerial videography collection event, aiming at collecting amazing aerial videos which are filmed in the open air with wonderful shots or footage using the professional DJI Spreading Wings S800+WooKong-M+Zenmuse Z15. The videos are expected to help people to see the world from a special perspective and to demonstrate the unique features of the selected filming site, such as: the Fuji Mountain in Japan, the Dutch Windmills in

News Details

©2013 DJI Innovations. All Rights Reserved.

12.5 Settings Page

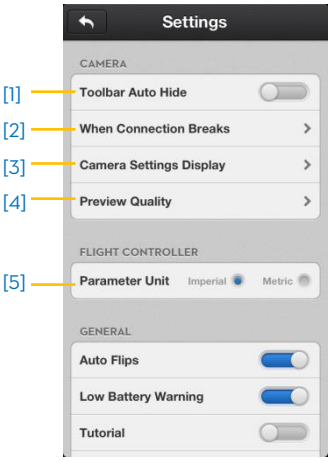

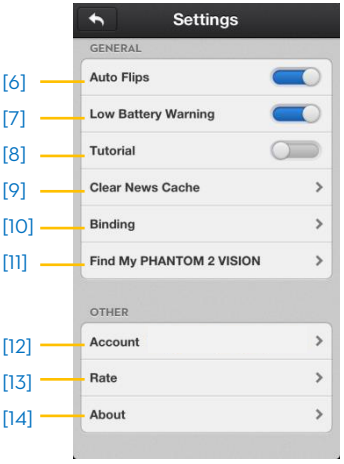

[1] Toolbar Auto Hide

Slide the switch from left to right to enable this function. And the toolbar will auto hide on the camera page.

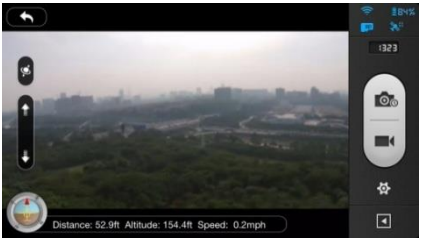

Toolbar Auto Hide Disabled

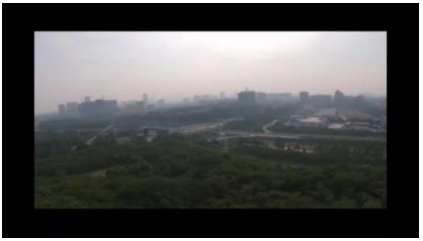

Toolbar Auto Hide Enabled

[2] When Connection Breaks

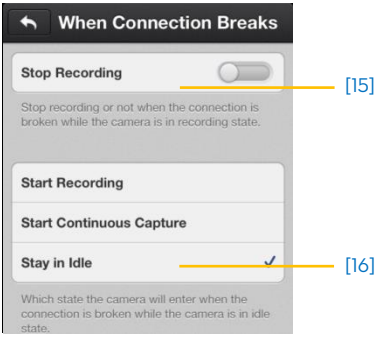
When Connection Breaks
Stop Recording
[15]
Stop recording or not when the connection is broken while the camera is in recording state.
Start Recording
Start Continuous Capture
Stay in Idle
[16]
Which state the camera will enter when the connection is broken while the camera is in idle state.

[15] Stop Recording:

Enabled: Stop recording when the Wi-Fi connection between the mobile device and the camera breaks while the camera is recording.

©2013 DJI Innovations. All Rights Reserved.

Disabled: Keep recording when the Wi-Fi connection between the mobile device and the camera breaks while the camera is recording.

[16] Select the state the camera will enter in the event of a Wi-Fi Connection break between the mobile device and the camera. Use this function to ensure you continue to capture the scenes you don't want to miss during a flight.

[3] Camera Settings Display

An enabled item will display in the camera settings toolbar, while a disabled item will be hidden.

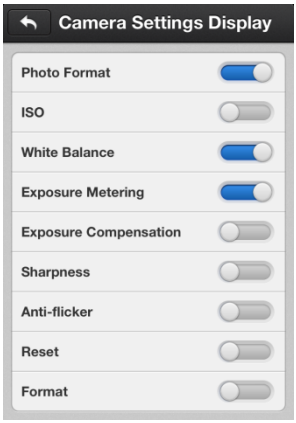

[4] Preview Quality

High: 640 x 480@30fps

Medium: 320 x 240@30fps

Low: 320 x 240@15fps (Recommended when there is a lot of interference.)

[5] Parameter Unit

Select imperial or metric units of measurement.

[6] Auto Flips

©2013 DJI Innovations. All Rights Reserved.

The GUI of DJI PHANTOM 2 VISION will flip if the mobile device's auto-flip is enabled.

[7] Low Battery Warning

If enabled, an alarm will sound when the battery level is too low. Be sure sound is enabled on the mobile device and try to adjust the volume to the highest level.

[8] Tutorial

Usage tips will be displayed.

[9] Clear News Cache

Click to clear news caches.

[10] Binding

In the event the camera and range extender bind is lost or one of them requires repair or replacement, camera and range extender binding can be performed via the DJI VISION App. Refer to <How to Perform a Camera & Range Extender Binding > for details.

[11] Find My PHANTOM 2 VISION

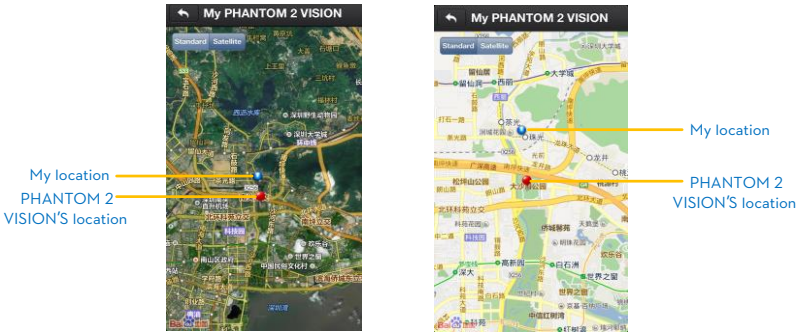

Satellite Mode

Standard Mode

[12] Account

Click to see user's account information.

[13] Rate

Click to rate the DJI VISION App. Internet access is required.

[14] About

Click to see the current version of DJI VISION App and also for contact information.

©2013 DJI Innovations. All Rights Reserved.

13 Assistant Software Installation and Configuration

13.1 Installing Driver and Assistant Software

The PHANTOM 2 VISION Assistant software and the PHANTOM RC Assistant software are used for advanced adjustments of the PHANTOM 2 VISION. Please follow the steps below to install the Driver and Assistant software.

1. Download	2.Connect	3.Install Driver	4.Install Software
Download the driver installer and assistant software installer from the DJI website.	Connect the PHANTOM 2 VISION to a PC via a Micro-USB cable.	Run the driver installer and follow the prompts to finish installation.	Run the assistant software installer and follow the prompts to finish installation.

⚠ The PHANTOM 2 VISION Assistant software supports only Windows operating systems (Win XP, Win7, Win8 (32 or 64 bit)).

13.2 Configure using the PHANTOM 2 VISION Assistant Software on a PC

1. Start up the PC, power on the PHANTOM 2 VISION, then Connect the PHANTOM 2 VISION to the PC with a Micro-USB cable. DO NOT disconnect until configuration is finished.
2. Run the PHANTOM 2 VISION Assistant Software and wait for the PHANTOM 2 VISION to connect to the Assistant Software. Observe the indicators on the bottom left of the screen. When connected successfully, the connection indicator is and communication indicator is blinking .
3. Choose [Basic] or [Advanced] configuration pages.
4. View and check the current configuration in the [View] page.

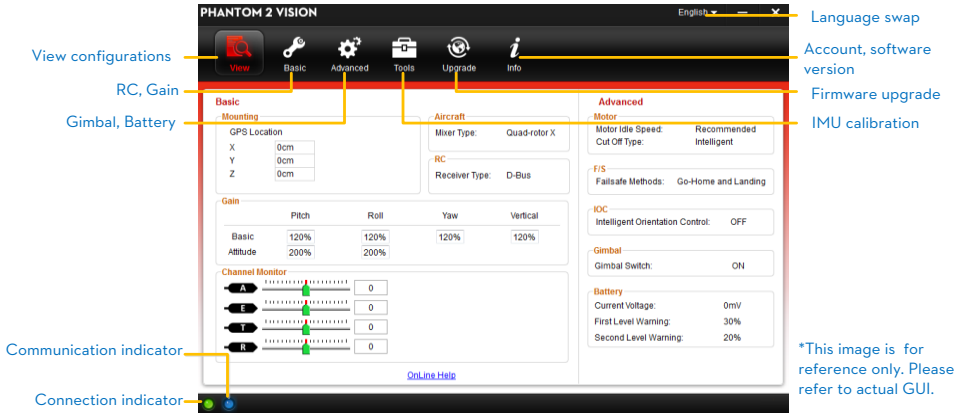

13.3 Firmware upgrade of the PHANTOM 2 VISION

Please follow the procedures to upgrade the software and firmware; otherwise the PHANTOM 2 VISION might not work properly.

©2013 DJI Innovations. All Rights Reserved.

1. An internet connection is required to upgrade the PHANTOM 2 VISION ' s firmware.
2. Click the [upgrade] icon to check the current firmware version and whether the installed firmware is the latest version. If not, click the relative links to upgrade.
   Be sure to wait until the Assistant software shows "finished". Click OK and power cycle the PHANTOM 2 VISION after 5 seconds. Once completed, the firmware is up to date.

(1) DO NOT power off until the upgrade is finished.

(2) If the firmware upgrade failed, the main controller will enter a waiting for firmware upgrade status automatically. If this happens, repeat the above procedures.

Firmware upgradable items:

(1) Main Controller

(2) GPS

(3) 5.8G Receiver

(4) P330CB (Main Board)

13.4 PHANTOM RC Assistant Software Description

Please refer to the <PHANTOM RC User Guide> for more details about the PHANTOM RC Assistant software.

©2013 DJI Innovations. All Rights Reserved.

14 Troubleshooting（FAQ）

14.1 How to solve large margin(s) mid-point error?

If the Remote Controller stick(s) mid-point margin of error is too big, the motors will fail to start when you execute the Combination Stick Commands (CSC) and the aircraft will not take off. Below are possible situations where the Remote Controller's stick(s) mid-point margins of error could be too big:

(1) One of the Remote Controller's stick position (except the throttle stick) is not centered when powering on the PHANTOM 2 VISION.

Solution: Place all Remote Controller sticks at their mid-point positions and then power cycle the PHANTOM 2 VISION to re-record the mid-point. If the problem persists, this can be caused by scenario (2).

(2) The Remote Controller sticks have been trimmed which leads to a large deviation of the mid-point position.

Solution: use the Assistant Software to perform a Remote Controller calibration. To do so, carry out the following procedures.

(a) Connect to the Assistant software, click Basic-> RC-> Command Sticks Calibration, and push all Remote Controller sticks through their complete travel range to see if any stick cannot reach its outer most position.

(b) Power cycle the PHANTOM 2 VISION. Note that a power cycle is required.

(c) Redo the Remote Controller calibration according to the Assistant software.

If the above solutions are useless, please send your Remote Controller to DJI Customer service for repair.

14.2 How to restore a video file if power is turned off during a recording session?

Solution: Keep or place the SD card back into the camera. Power cycle the camera and wait about 30 seconds for the video file to be restored.

14.3 Failure to acquire the SSID.

Please double check whether both the camera and Range Extender are powered on and the power switch of the camera is switched to "WIFI ON."

14.4 What to do if PHANTOM 2 VISION is out of sight and the Wi-Fi connections is lost?

Turn off the Remote Controller to trigger the Failsafe mode and the aircraft will start to fly back, descend, and land at the Home point automatically. Please make sure there are no obstacles within the go home route and you are familiar with the regaining control procedure.

14.5 Wi-Fi connection fails all the time.

Please double check the current Wi-Fi connection status of the mobile device. The mobile device may be connecting to other Wi-Fi networks after a connection breaks with the PHANTOM 2 VISION.

©2013 DJI Innovations. All Rights Reserved.

14.6 Files fail to synchronize.

Video files that are too large (file sizes close to 4GB) cannot be synchronized to the mobile device. Some mobile devices also fail to support synchronization of the 1080i60 video files.

14.7 Albums fail to synchronize.

Reset the settings of your mobile device as illustrated below. Enable the Settings ->Private->Photos->DJI VISION. Otherwise the Albums will fail to synchronize with your mobile device.

Privacy
Photos
Photos stored on your iPod touch may contain other information, such as when and where the photo was taken.
DJI VISION
ON
DJIHand
ON
Apps that have requested access to your photos will appear here.

14.8 Failure to share.

Please make sure the mobile device has access to the Internet.

©2013 DJI Innovations. All Rights Reserved.

15 Appendix

LED Flight Indicator Status

Normal status	LED Flight Indicators
Power On Self-Test	
Warming Up	
Ready to Fly	
Ready to Fly (non-GPS)	
Warning and Error	**LED Flight Indicators**
Remote Controller Signal Lost	
1st Level Low Battery Capacity Warning	
2nd Level Low Battery Capacity Warning	
Not Stationary or Sensor Bias is Too Big	
Error*	
Compass Needs Calibration	

*You can figure out the error by connecting the PHANTOM 2 VISION to the Phantom 2 Vision's Assistant Software.

©2013 DJI Innovations. All Rights Reserved.

Specifications

Aircraft	
Supported Battery	DJI 5200mAh LiPo Battery
PHANTOM 2 VISION Weight	1160g
Hovering Accuracy (Ready to Fly)	Vertical: 0.8m; Horizontal: 2.5m
Max Yaw Angular Velocity	200°/s
Max Tilt Angle	35°
Max Ascent / Descent Speed	6m/s
Max Flight Speed	15m/s (Not Recommended)
Wheelbase	350mm
Tilting Range of Gimbal	0° - 60°
Remote Controller	
Operating Frequency	5.728 GHz - 5.85 GHz
Communication Distance (open area)	CE Compliance: 300m; FCC Compliance: 500m
Receiver Sensitivity (1%PER)	-93dBm
Transmitting Power (EIRP)	CE Compliance: 25mW; FCC Compliance: 125mW
Working Current/Voltage	80 mA@6V
Battery	4 AA Batteries
Camera	
Resolution	14 Mega pixels
FOV	140 °/ 120° / 90 °
Sensor Size	1/2.3"
Functions	Support of multi-capture, continuous capture and timed capture Support of HD Recording (1080p30,1080i60) Support of both RAW and JPEG photo formats
Range Extender	
Operating Frequency	2412MHz - 2462MHz
Communication Distance (open area)	300m
Transmitting Power	17dBm
Power Consumption	1.5W
DJI VISION App	
Support of Mobile Device	Recommended: iPhone4s, iPhone5, iPhone5s, iPod Touch4, iPod Touch5; available but not recommended: iPAD3, iPAD4, iPAD mini. Samsung Galaxy S3, S4, Note2, Note3 or phones of similar configuration.
System Requirement of Mobile Device	iOS 6.0 or above; Android system 4.0 or above

©2013 DJI Innovations. All Rights Reserved.